
 
 

 

 
 

 


 
 
 
 
 
 


Image	Code Ending	Configuration	Seats	A ANCONA FABRIC	G GRACELAND FABRIC	S SUNDAY FABRIC
 SQ CR	+	CORNER	1			
	CM w x d x h	106x106x75-94				
 2.5S(MOT)BATT-ELE	4EB	** 2.5 SEATER WITH 2 BATT-ELEC RECLINERS	3			
	CM w x d x h	216x106x75-94				
 2.5S(2MOT)-ELE	4ER	** 2.5S WITH 2 ELE MOTIONS	3			
	CM w x d x h	216x106x75-94				
 1.25LAFRC-BATT-ELE	EGB	** 1.25LAF BATTERY ELEC	1			
	CM w x d x h	108x106x75-94				
 1.25LAFRC-ELE	EGE	** 1.25LAF RC ELE	1			
	CM w x d x h	108x106x75-94				
 1.25RAFRC-BATT-ELE	EHB	** 1.25RAF BATTERY ELEC	1			
	CM w x d x h	108x106x75-94				
 1.25RAFRC-ELE	EHE	** 1.25RAF RC ELE	1			
	CM w x d x h	108x106x75-94				
 1.25NA	EQ	1.25 SEAT ARMLESS CHAIR	1			
	CM w x d x h	77x106x75-94				
 1.25NA-BATT-RC	EQB	** 1.25 ARMLESS BAT-ELE	1			
	CM w x d x h	77x106x75-94				
 1.25NA-ER	EQE	** 1.25 SEAT ARMLESS MOT-ELEC	1			
	CM w x d x h	77x106x75-94				
 RIGHT TERMINAL CORNER	N	RIGHT TERMINAL CORNER	3			
	CM w x d x h	218x107x75-94				
 LEFT TERMINAL CORNER	NA	LEFT TERMINAL CORNER	3			
	CM w x d x h	218x107x75-94				

Please Note: Dimensions quoted on this document are approximate and may vary slightly from the actual product
All diagrams on the sheet are only provided as an approximate representation of the footprint of the lounge and are in no way intended to represent the actual shape of the lounge.

** Electric recliners require 240v mains power

Image	Code Ending	Configuration	Seats	A ANCONA FABRIC	G GRACELAND FABRIC	S SUNDAY FABRIC
	TM	** 2.5SLAF-ELE-RC + CORNER + 1 TERMINAL	6			
	<i>CM</i> w x d x h	287x218x75-94				
	TMB	** 2.5SLAF-BAT-RC + CORNER + 1 TERMINAL	6			
	<i>CM</i> w x d x h	287x218x75-94				
	TMSP	** 2.5RC-ELEL+CORNER+1TERMINAL	6			
	<i>CM</i> w x d x h	287x218x75-94				
	TS	** 1 TERMINAL + CORNER + 2.5SRAF-ELE-RC	6			
	<i>CM</i> w x d x h	287x218x75-94				
	TSB	** 1 TERMINAL + CORNER + 2.5SRAF-BAT-RC	6			
	<i>CM</i> w x d x h	287x218x75-94				
	TSSP	** 1 TERMINAL + CORNER + 2.5RAF-ELE-RC	6			
	<i>CM</i> w x d x h	287x218x75-94				

Please Note: Dimensions quoted on this document are approximate and may vary slightly from the actual product
All diagrams on the sheet are only provided as an approximate representation of the footprint of the lounge and are in no way intended to represent the actual shape of the lounge.

** Electric recliners require 240v mains power

Model Name: MAZARA

Construction

Additional Comments

COVER TYPE: FABRIC
COVER DESCRIPTION & OPTIONS:
CAT A = Ancona Fabric
CAT G = Graceland Fabric
CAT S = Sunday Fabric
FRAME: Kiln Dried Timber & Plywood
BACK CUSHION: PU Foam with Polyester Fibre
SEAT CUSHION: Pocketed Coil Spring & PU Foam with Polyester Fibre
SEAT SUSPENSION: Individually Pocketed Coil Spring with No-sag Spring and Polyester Fibre
LEG: Wood - Grey Wash

Key Feature:
OPEN BASE CORNER RECLINER WITH TIMBER FEET

Please note:

- The 2.5 seater dual-recliner comes in 2 pieces, so an armless can be inserted into this piece.
- The 2.5 seater 1 arm electric recliner in the corner modular TM/TS/TMB/TSB comes in 1 piece, so an armless can not be inserted into this piece.
- ONLY EQ can be inserted between 2.5 1arm-ELE-RC and corner terminal.
- EQE can NOT be inserted next to the corner terminal, because the recliner won't open. If customer wants to add a 1.25 armless recliner, the configuration needs to be:
 - EGE + EQE + EQ + N = 1.25LAF RC-ELE + 1.25 NA RC-ELE + 1.25NA + RIGHT TERMINAL CORNER,
 - or
 - EHE + EQE + EQ + NA = 1.25RAF RC-ELE + 1.25 NA RC-ELE + 1.25NA + LEFT TERMINAL CORNER

BATTERY-OPERATED RECLINER OPTIONS
TSB (L) / TMB (R) = 2.5S 1 ARM (1MOT)-BATT-ELEC + TERMINAL CORNER

Battery IMPORTANT information

- 1) The battery pack needs to be charged initially for 12 hours before use.
- 2) You **MUST** charge it every 4 weeks otherwise the battery life will fail. User must never let unit fully discharge as this shortens the life of the battery pack.
- 3) Battery pack is warranted for one year - replacement battery packs are available for purchase if required.
- 4) If the light is orange, this means it's fully charged.
- 5) If light is red, this means the battery pack needs recharging
- 6) No light means battery pack is discharged and requires charging
- 7) If going away on an extended holiday, user should switch off at the back, just by pushing it off and then back on when home again

PLEASE SEE BELOW PHOTO OF WHERE THE BATTERY PACK GETS INSERTED INTO THE LOUNGE IF CUSTOMER PURCHASES THE BATTERY PACK OPTION.



[Refer to Nick Scali website for Reach Compliance information](#)